



# FS60 Hands Fitting Manual

## ★PREPARATIONS BEFORE HAND SETTING


◆CHECK THE POSITION OF DAY JUMPER AND DAY WHEELS.

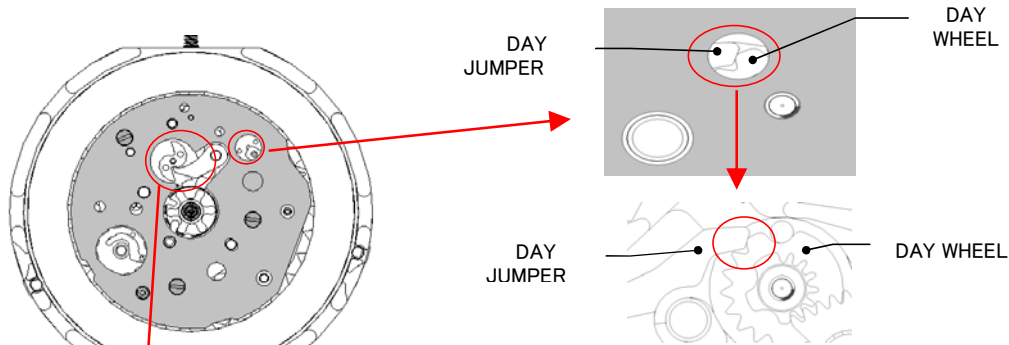

◆CONFIRM THAT THE TOP OF DAY JUMPER AND DAY WHEEL TOUCH EACH OTHER AS ABOVE PICTURE.

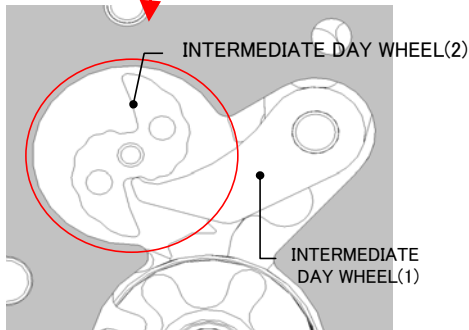

◆CONFIRM THAT THE POSITION OF THE INTERMEDIATE DAY WHEEL (1)&(2) IS AS ABOVE PICTURE.

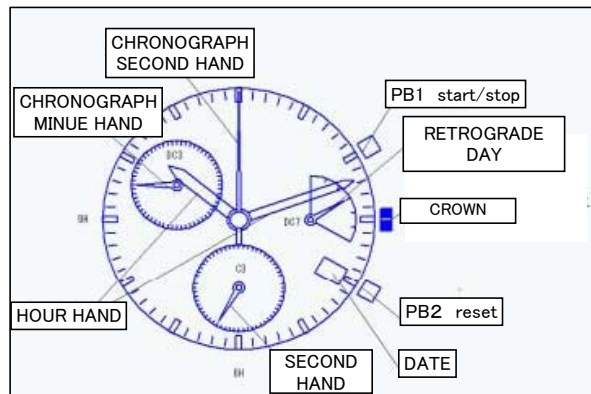

◆IF THE POSITION OF THESE PARTS IS NOT AS ABOVE PICTURES, PULL THE CROWN TO THE 1ST CLICK POSITION AND TURN COUNTERCLOCKWISE TO ADJUST THE POSITION OF THEM.

## ★THE METHOD OF HANDS FITTING.

- ①PULL THE CROWN TO THE 2ND CLICK POSITION.
- ②SET THE DIAL AND PUSH THE PB2 IN ORDER TO RESET THE CHRONOGRAPH.
- ③TURN THE CROWN UNCLCLOCKWISE SLOWLY AND STOP RIGHT AFTER CHANGING OF THE DATE.
- ④SET THE DAY HAND ON THE SCALE THAT IS THE LEFT EXTREMY POSITION OF THE RETROGRADE INDICATOR. IN CASE OF THE FOLLOWING PICTURE, THE LEFT EXTREMY IS MONDAY(M) POSITION.
- ⑤SET THE CHRONOGRAPH MINUTE HAND AND SECOND HAND AT 60 (ZERO) POSITION.
- ⑥SET THE HOUR HAND, MINUTE HAND AND CHRONOGRAPH SECOND HAND AT 12H (ZERO) POSITION.



★THE WAY TO CHECK THE FUNCTION.

①RESET

HOUR HAND, MINUTE HAND, SECOND HAND AND DAY HAND WILL STOP WHEN THE CROWN IS PULLED TO THE 2ND CLICK POSITION FROM THE NORMAL HAND RUNNING CONDITION. THE CHRONOGRAPH SECOND HAND WILL STOP AT THE ZERO POSITION.

②SET THE CHRONOGRAPH SECOND HAND AT ZERO POSITION.

PUSH THE PB1 ONCE TO SET THE CHRONOGRAPH SECOND HAND AHEAD ONE SCALE. OR KEEP PUSHING TO SET THE CHRONOGRAPH HAND QUICKLY.

③CHECK THE DATE DIAL CHANGING.


CHECK THAT THE DATE DIAL CHANGES AT 0:00±40MINUTE.

④SET THE TIME.

PULL THE CROWN TO THE 2ND CLICK POSITION AND TURN IT TO SET THE TIME.

⑤CHECK THE QUICK DATE AND DAY ADJUSTMENT.

PUSH THE CROWN TO 1ST CLICK POSITION. THEN, TURN THE CROWN CLOCKWISE TO SET DATE QUICKLY. TURN THE CROWN COUNTERCLOCKWISE TO SET THE DAY QUICKLY. ( CHECK THE MOVING OF FLY-BACK)

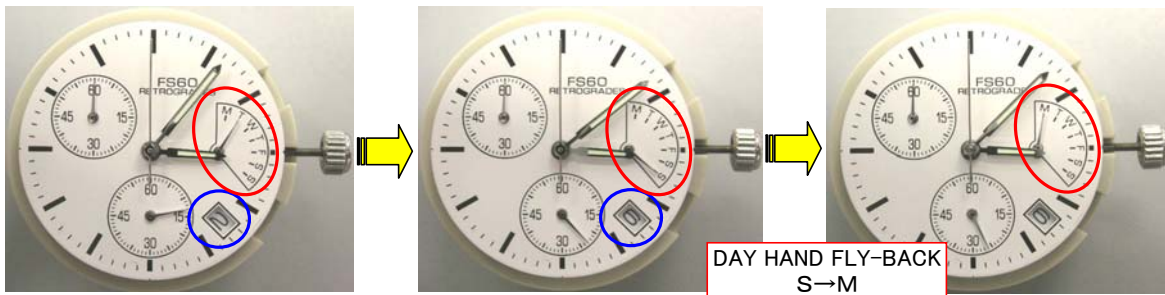

⑥CHECK THE CHRONOGRAPH FUNCTION.

PUSH THE CROWN TO NORMAL POSITION.

I , PUSH THE PB1 ONCE TO CHECK THAT THE CHRONOGRAPH SECOND HAND STARTS MOVING.

II , PUSH THE PB1 ONCE TO CHECK THAT THE CHRONOGRAPH SECOND HAND STOPS.

III , PUSH THE PB2 ONCE TO CHECK THE CHRONOGRAPH HANDS TURNED BACK TO ZERO POSITION.

